

## 6W Dual White LED Lamp

Model No.: FUT017


### Features

-  Color temperature  
2700K~6500K
-  Dimmable  
Saturation control
-  2.4G RF wireless transmission  
technology
-  Signal transmitting &  
Modes synchronization
-  Remote control  
Control distance 30m
-  Smartphone APP control  
(2.4GHz gateway is needed)
-  Support third party voice control  
(2.4GHz gateway is needed)
-  DMX512 controllable  
(DMX512 transmitter is needed)

### Parameters


Model No.: FUT017  
Power: 6W  
Voltage: AC100~240V  
Frequency: 50/60Hz  
Color Temp.: 2700K~6500K  
Light Efficiency: 85LM/W  
Luminous Flux: 500LM

CRI: >80  
PF: >0.5  
Lifespan: 50000h  
Beam Angle: 220°  
RF: 2.4GHz  
Control Distance: 30m  
Base Type: E26/E27/B22

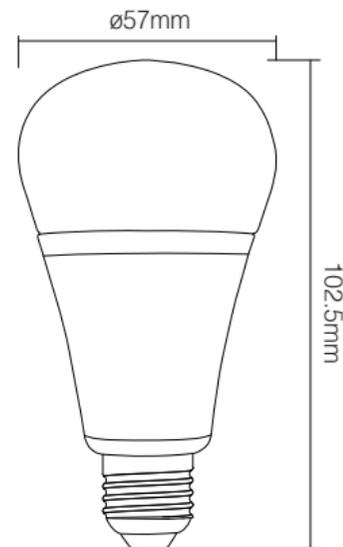

### Link/Unlink

Compatible with these remote controls (Purchased separately)

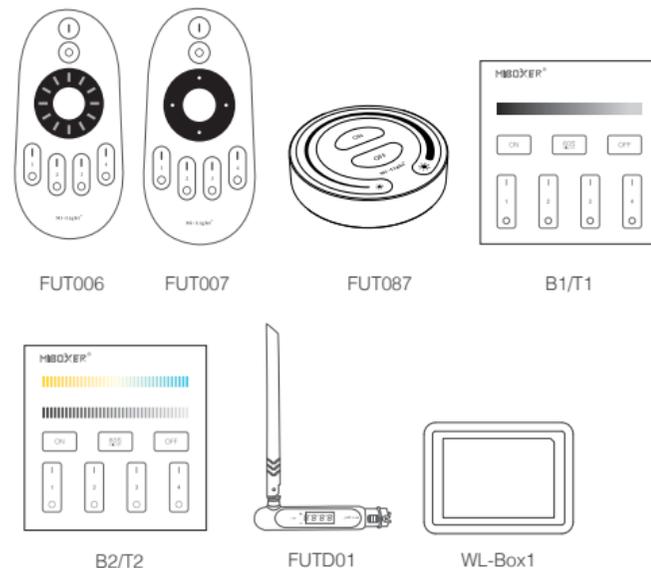


### **NOTE:**

LED bulb can be working after linking with remote controller or DMX512 transmitter; for more details, please read the remote controller or DMX512 transmitter instruction.


# DMX512 LED Transmitter Link/Unlink

Compatible with DMX512 LED Transmitter (**Purchased separately**)


① Choose the zone for the controller by pressing '+' or '-' (e.g. 'CH12' means zone 12)

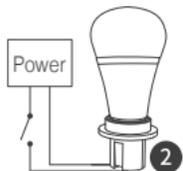

**Link** Switch off the bulb, after 10 seconds switch on again

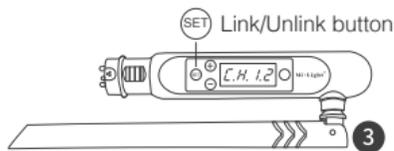

When the bulb pilot lamp is on, short press "SET" **3 times** within 3 seconds

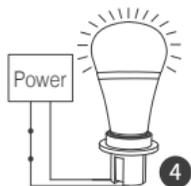

The bulb blink slowly 3 times, means the linking is done successfully


**Unlink** Switch off the bulb, after 10 seconds switch on again

When the bulb pilot lamp is on, short press "SET" **5 times** within 3 seconds

The bulb blink quickly 10 times, means the unlinking is done successfully

 If the link or unlink failed, please follow the above steps again.

## DMX512 LED Transmitter Connection Diagram

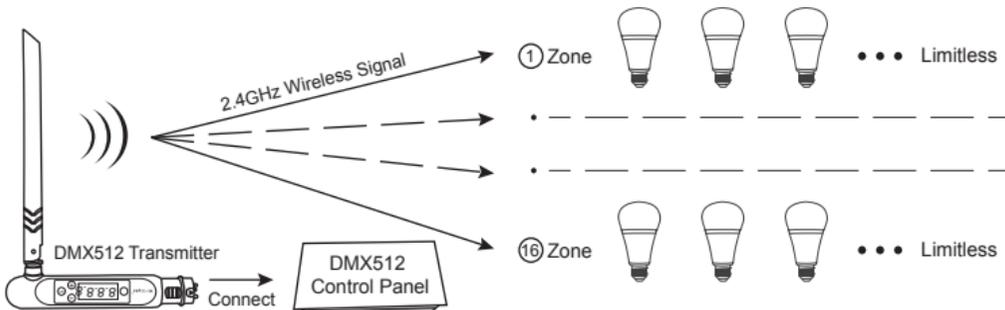

## Signal transmitting


One bulb can transmit the signals from the remote control to another bulb within 30m, as long as there is a bulb within 30m, the remote control distance can be limitless.

## Attention

1. Make sure the voltage is between AC100~240V.
2. When install the light, pls switch off the power to make sure the safety.
3. The working power is high voltage alternating current, so it must be far away from people and must with ground connection.
4. Avoid using under high temperature or moisture.

## Modes synchronization

Different bulb can work synchronously when they are started at different times, controlled by the same remote, under same dynamic mode and within 30m distance.

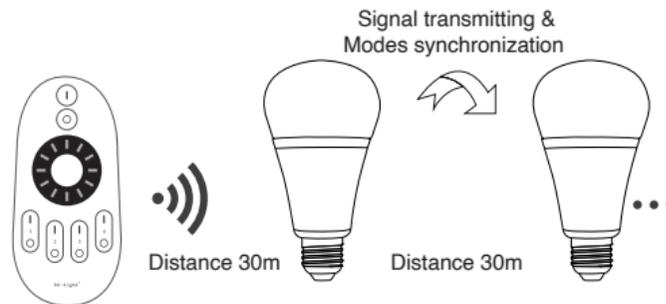

Made in China